

Primer Pocket

Quick Start Guide

4.3"Primer Pocket



SX-SP430A

1. Introduction

- Browse the web,from the palm of your hand,anywhere wi-fi* is availble.
- Playback support for multiple audio and video formats,including mp3 and mp4.
- Multi-touch interface with pinch-to-zoom for an enjoyable touchscreen exprience.

2. Features

- Operating System: Android2.2
- CPU:JZ4760B processors,Frequency 600MHz Support for hardware 2D graphics acceleration.
- System Memory: DDR2 256MB
- Storage:Built-in flash memory 4GB
- External Storage:MicroSD card storage up to 16GB
- Multi-touch and G-sensor
- WiFi b/g/n for fast web browsing and downloads.
- 4.3" Full Color Widescreen, Resolution 480 x 272.

3. Specification

 
- Power Input: 5V 500mA
- Stock temperature: -20~60°C
- Operating temperature: 0~40°C
- Unit size: 115 x 78 x 12.5 mm
- System requirement:
 - USB OTG Support Win7 / Vista / WinXP / 2003 / 2000
- One year limited Warranty on parts and labor

- P1-

4. Package Contents


- 4.3"Primer Pocket X 1
- AC Power Adapter X 1
- Quickstart guide X 1
- Headphone X 1
- Mini-USB Cable X 1
- Warranty card X 1
- eMusic gift card X 1

5. Micro SD Card Installation

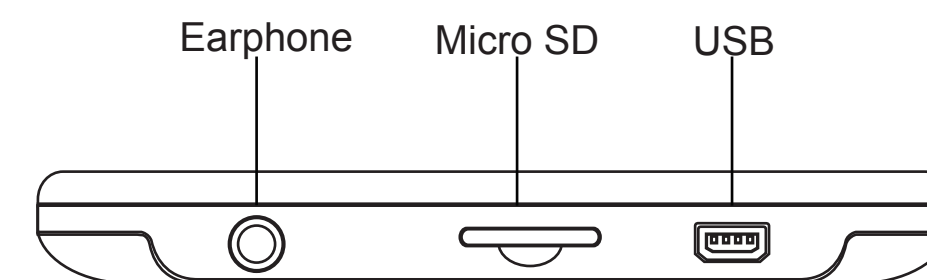


When inserting the Micro SD card, gently insert the card into the open slot (Please see image)

 When removing the Micro SD card, gently tap the card, it will pop out automatially.

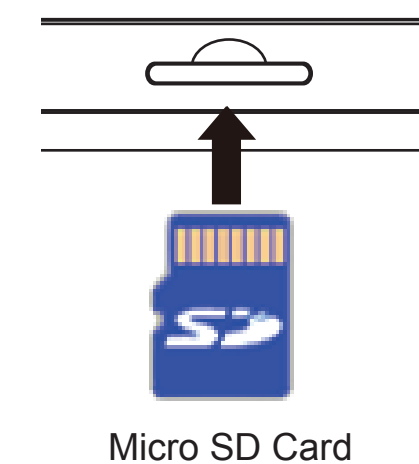

- P2-

 
6. Part name and function

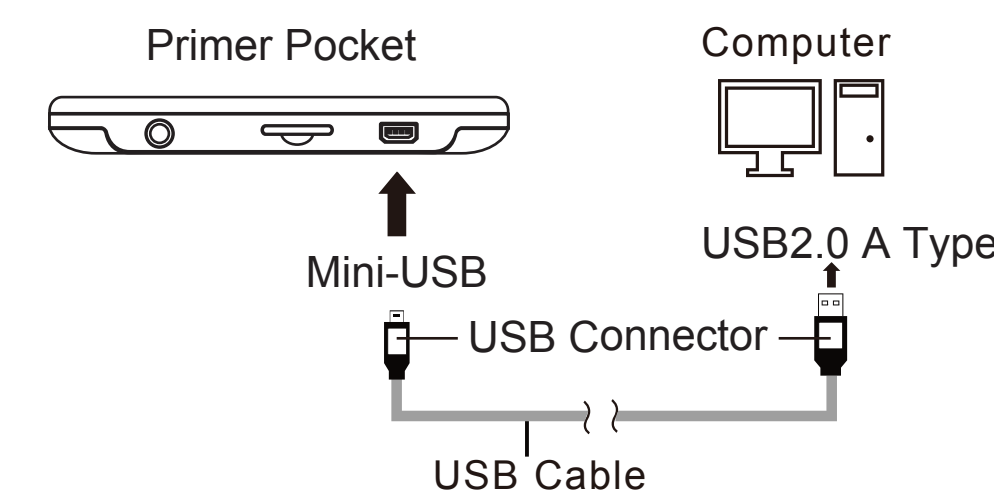

- USB Connector:
Mini-USB: This USB connector connects to the USB interfaces into the Primer Pocket.
USB2.0 A Type: This USB connector connects to the USB interfaces into a computer.
- USB Cable:
Connect the Primer Pocket and a computer.

7. Charging

 - LED Indicator:
Charging: LED ON
Charged: LED OFF

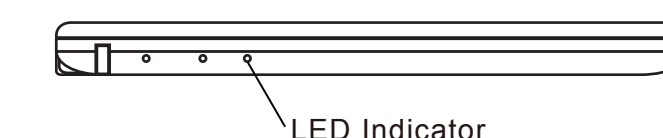

Using the AC Power Adapter.

- P3-

8. Troubleshooting

1. There is no sound in earphone.

- Please check there is no problem with the earphone connection.

2. How to obtain Apps (Apks) .

- You can download via PC and side load apps, or you can download online directly from the device and install. (for more details, please check our website)

3. The Primer pocket does not turn on .

- Plug in the power adapter and try again
- If still does not turn on after battery is fully charged or while the device is plugged in, please contact customer service/tech support.

4. Excess noise/distortion .

- Please check to see if the earphone plug is clean. dirt may cause noise or distortion.
- Check that the audio file has not been damaged. Play other music files to see if the issue is widespread. If the file is corrupt, delete it from the device.

For contact information and/or troubleshooting, please visit our website at "www.skytex.com".

- P4-